

VoIP ATA BRV111, BRV102 Quick Installation Guide

Installation & Setup

- **LAN Connection**


Connect an Ethernet cable from your PC's Ethernet port to the LAN port of the VoIP ATA.

- **WAN Connection**

Connect an Ethernet cable from the router to the WAN port of the VoIP ATA.

- **VoIP Connection**

Connect the telephone to PHONE port and your PSTN line to LINE port.

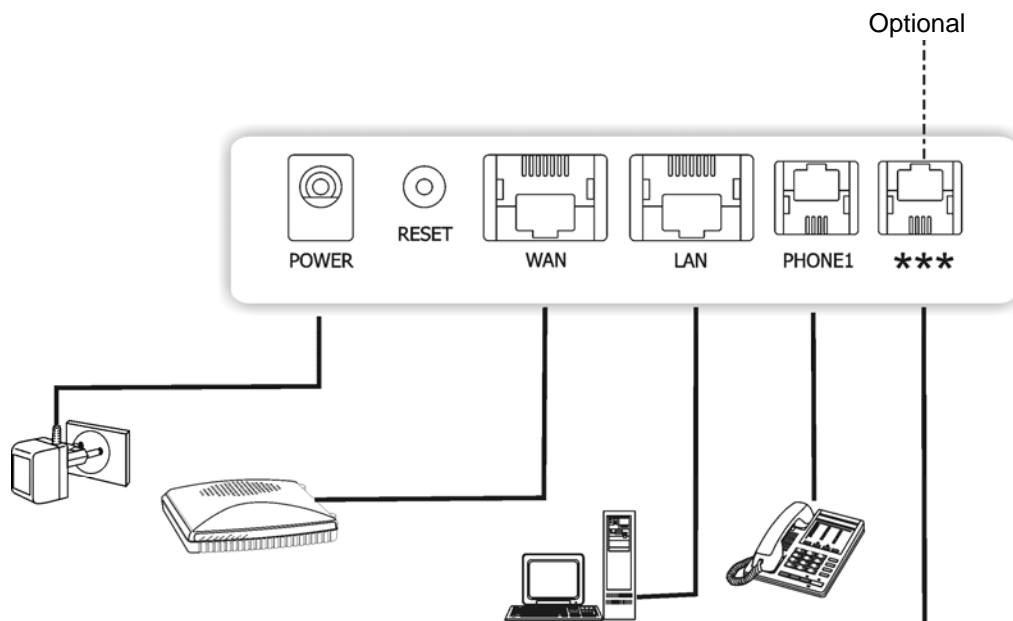

Power Adapter Connection

Connect the power adapter to the power inlet.

Check your device rear panel, the alternative could be as follows:


PHONE (FXS): Connect to the Telephone (**model BRV102**)

LINE (FXO): Connect to PSTN Line (**model BRV111**)

Configuring VoIP ATA with Web Browser

Open web browser and type <http://192.168.3.1> in the browser's address box. This number is the default IP address for this device.

A user name and password prompt will appear. The username is admin and password is admin.

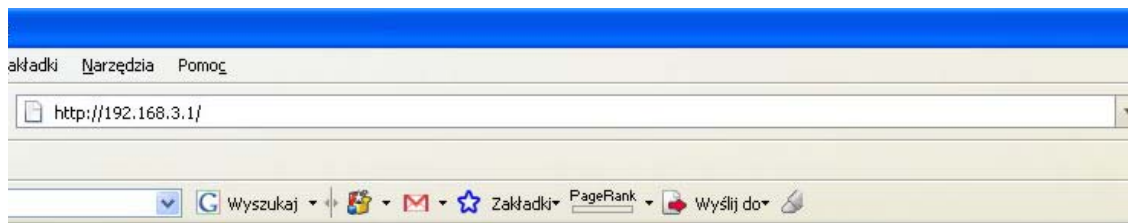

Login VoIP


Enter your username and password to login
VoIP server

Username

Password

VoIP Application

FXS – FXS

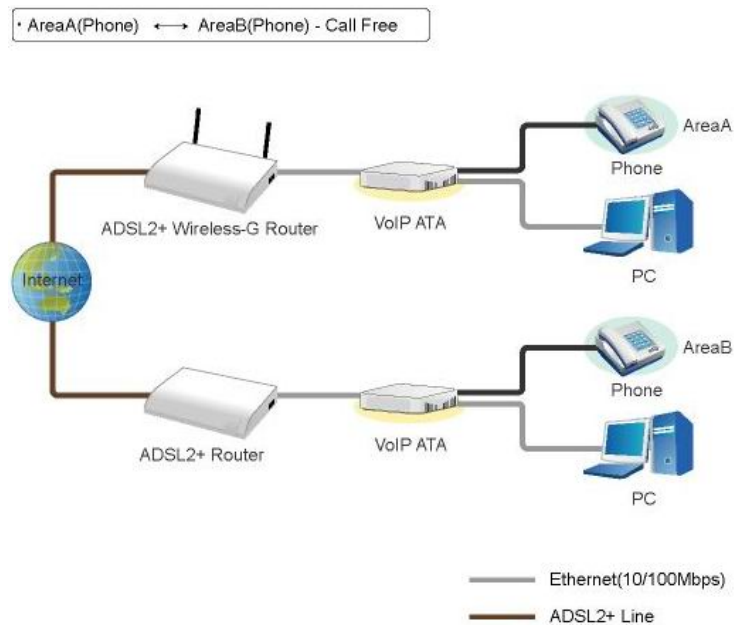

---- For more details, please refer to our manual.

Browse the User's Manual

1. Insert the CD into your CD-ROM, and the CD will be display with Auto-Run.
2. Manual by PDF format.

***optional**

There are three models for VoIP ATA:

- 1) one FXS(PHONE) port & one FXO(LINE) port (**BRV111**)
- 2) two FXS(PHONE) ports (**BRV102**)

You can check the package content for which one you bought.



MAXCOM Sp. z o.o.
ul. Towarowa 23a
43-100 Tychy

tel.: 032 327 70 89
fax: 032 327 78 60
www.maxcom.pl
e-mail: office@maxcom.pl